

CUSTOM GLAZE



Assembly and Installation Procedures

Care must be taken when installing Custom Glaze.

Please read the following installation instructions to avoid disappointment.

Custom Glaze Polycarbonate sheeting has an overlapping rib and an underlapping rib. Overlapping rib height is 28.5mm, underlapping rib is 30mm (effective cover is 610mm)

1. Lay the first sheet so the first rib is dead centre on the rafter. Fix the first rib being the 30mm overlapping rib only.

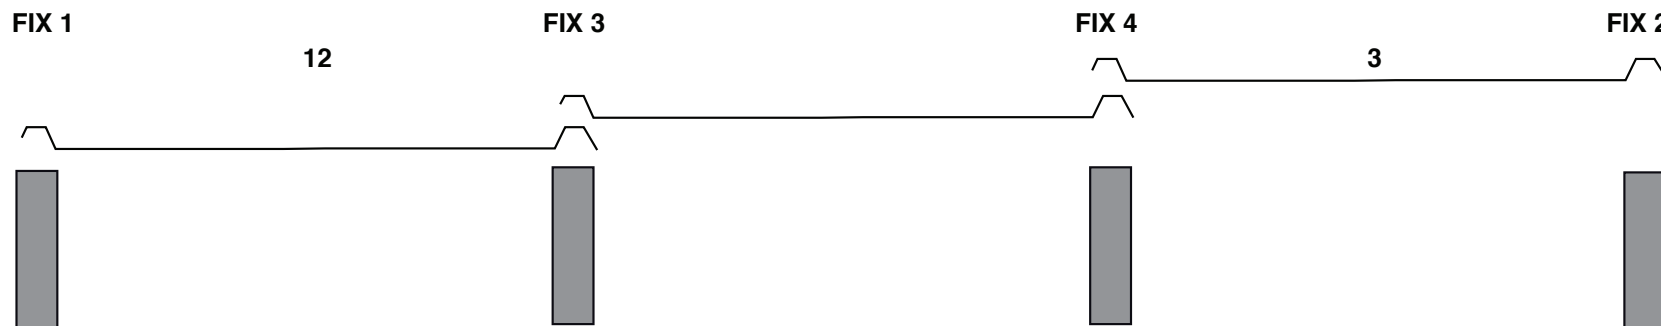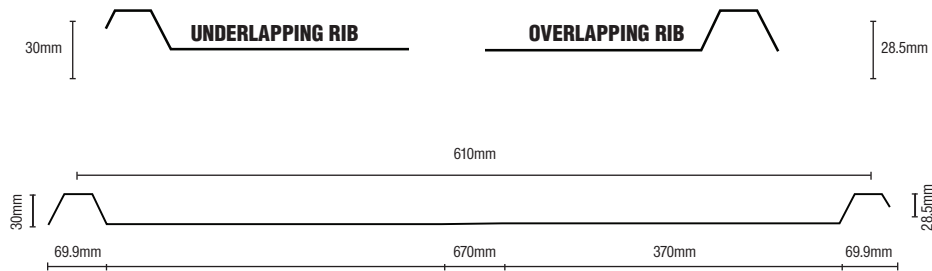

2. Lay the 3rd sheet on the 4th rafter and secure the overlapping 30mm rib only.
3. Insert the middle sheet and fix. Sheets will be a good tight fit and will ensure the pans remain flat. Fix as over sheet number 1 underlap rib and fix under sheet number 3 overlapping rib.
4. Continue on using this procedure with the next 3 sheets as this fixing method will ensure all overlapping ribs are effectively situated above the purlins.

In areas prone to high winds it is possible that the pan of the sheet may chatter. Should this happen, Noise Stop Tape can be applied to every purlin. The same applies should any bowing be seen in the pan of the sheets.